


## BATTERY

### LOAD BATTERY

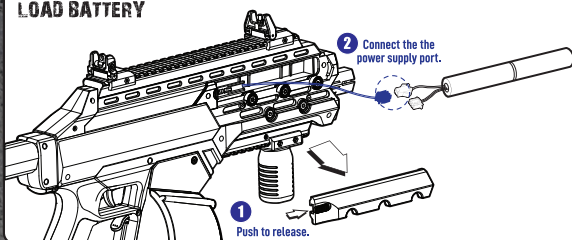

For peak performance, fully charge battery before each battle. Recharge when rate of fire noticeably declines.

#### IMPORTANT: RECHARGEABLE BATTERY INFORMATION

Retain this information for future reference. Batteries should be replaced by an adult. Only use CosmoXtoys certified battery.


**WARNING:** Risk of fire, explosion, and burns. Do not disassemble, crush, heat above 45 °C (113 °F), or incinerate. Dispose of this battery according to your local recycling or waste regulations – never disassemble. Do not use the item near a heat source such as a fire or heater.

**CAUTION:** Risk of fire and burns. Do not open, crush, heat above 45 °C, or incinerate. Follow manufacturer's instructions.

**WARNING:** Use only with the device provided. Chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the product must not be used with this charger until the damage has been repaired.



### OPEN BATTERY COVER

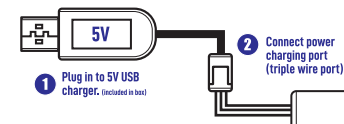

Battery

## HYDRATE ROUNDS



Allow rounds to remain in container for about 3-4 hours to be fully hydrated.

**ROUND STORAGE**  
Discard any unused hydrated rounds.

Open 1 packet and pour rounds into container of clean tap water. It is recommended to use at least 0.5 gallon/2 liters of water per 5,000 rounds. If you want to hydrate only some of the rounds in a packet and save some rounds for later, use the same amount of water.

More water than recommended will not impact hydration: It is not possible to overhydrate the rounds or grow them too large to function in the blaster.

Make sure rounds are fully submerged in water.

14+

CX-27-P / CX-27-B

COSMOXTOYS and all related trademarks and logos are trademarks of Cosmo Outdoor Inc. 2022 COSMOXTOYS.

cosmoXtoys


<http://www.mycosmoxtoys.com>

TO AVOID EYE INJURY:  
**WARNING:** Do not aim at eyes or face. Use of eyewear always required for players and people within range. Use only official CosmoXtoys Rounds. Use only clean tap water to hydrate rounds. Do not freeze or modify rounds. Do not modify blaster. Impact from rounds may cause temporary marks on skin. Ages 14 and up. This is not a toy. Read instructions before use for important safety information.

**WARNING: COMPLY WITH ALL LAWS.**  
Check to ensure the use and possession of this product is allowed where you are intending to use it, as using, displaying, transporting, or carrying this product may be prohibited by law or regulation in certain locations, such as schools, airports, government property, and high-density areas. Do not aim or blast at bystanders, animals, moving vehicles, or others' property. Do not alter this product to make it look like a firearm. Such alteration is dangerous and could be a crime and/or create confusion by law enforcement or others that it is a firearm.


DO NOT EAT. KEEP AWAY FROM PETS. ROUNDS MAY STAIN.

## ASSEMBLY

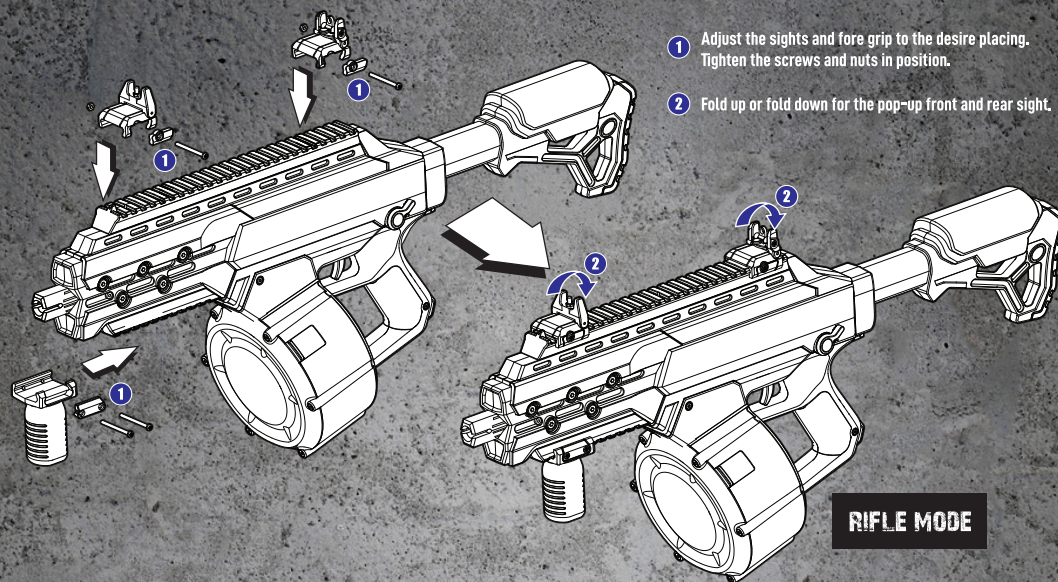


RIFLE MODE

## CUSTOMIZE

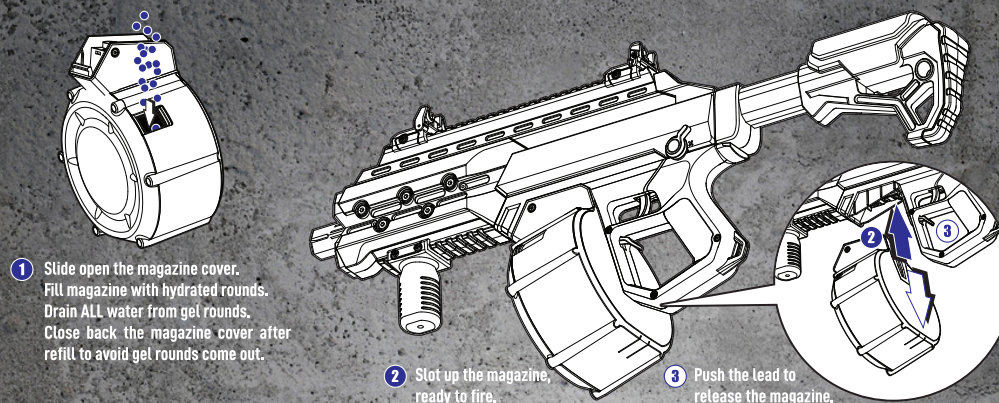

## FIRE

## CHANGE STOCK

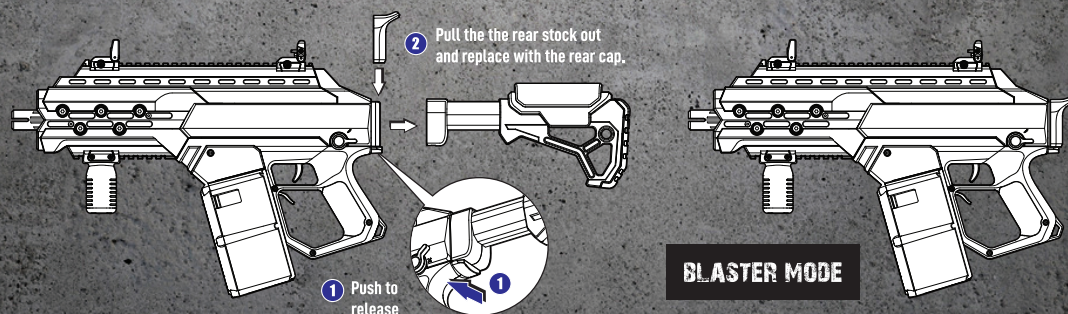

BLASTER MODE

### EYES PROTECTION

Included in box



Wear the included protective eyewear when you or anyone else nearby is using a CosmoXtoys blaster.

