

Dan Wesson 8"

- 4.5 mm CO₂ BB Air pistol



User guide

Read through this manual before use.



611169254

WARNING: THIS IS NOT A TOY, ADULT SUPERVISION REQUIRED, MISUSE OR CARELESS ISE MAY CALISE SERIOUS INITIBY OR DEATH MAY BE DANGEROUS LIPTO 224 YARDS 250 METERS THIS RGIIN IS RECOMMENDED FOR USE BY THOSE 16 YEARS OF AGE OR OLDER, READ ALL INSTRUCTIONS BEFORE USING, THE PURCHASER AND USER SHOULD CONFORM TO ALL LAWS GOVERNING THE USE AND OWNERSHIP OF THIS AIRGUN

WARNING: DO NOT BRANDISH OR DISPLAY THIS AIRGUN IN PUBLIC, IT MAY CONFUSE PEOPLE AND MAY BE A CRIME POLICE AND OTHERS MAY THINK THIS AIRGUN IS A FIREARM DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS NGEROUS AND MAY BE A CRIME

Warning (1/5)



Always use precision steel BBs for this BB Airgun. Never use any used or damaged BBs.



Always wear safety goggles when using your BB Airgun.



Do not look directly into the gun barrel.

Warning (2/5)



Never aim or shoot at people or animals. Always set the selector on "safe" position (except when you are ready to shoot a target).



Select a safe place for operating the Airgun. Avoid shooting in public places.



Do not disassemble the gun yourself. Always contact your local retailer.

Warning (3/5)

- Always point the gun in a safe direction. NEVER POINT YOUR AIRGUN AT PEOPLE OR ANIMALS EVEN IF IT IS NOT LOADED. Always assume and treat the gun as if it were loaded and ready to fire.
- Airguns are not toys. They should only be used under adult supervision. Safety is a straightforward but continuous process. THE UNSUPERVISED USE OF AIRGUNS IS NOT RECOMMENDED FOR PERSONS UNDER 16 YEARS OF AGE
- 3. Think first, fire second.
- Always use eye protection.
- Always use hearing protection.
- Always keep your fingers away from the trigger during cocking and handling. Keep your finger away from the trigger and the safety "ON" until you are ready to fire. After fire, return the safety to the "ON" position.

Warning (4/5)

9. Never use drugs or alcohol while handling this product.

- Always be certain of what is behind your target. Use extra precaution in selecting a safe target. Improper targets may cause ricochet.
- 8. Do not fire at a target which allows ricochets or deflections. Do not fire into or at water, or hard surfaces.
- 10. The Airgun and BBs should be kept in separate and secured places. Always keep the airgun out of reach of children
- 11. After use and before putting the airgun away, always make absolutely sure that there are no BBs in the chamber, the safety is "ON" and the CO, cartridge removed.
- 12. Do not load the airgun until you are ready to fire. Do not walk, run, jump or climb when carrying a loaded airgun. A loaded Airgun should never be carried inside a vehicle. Always keep the safety "ON", even when the Airgun is unloaded.

Warning (5/5)

A WARNING:
NEVER MODIFY OR ALTER YOUR AIRGUN. MODIFICATION OF THE GUN MAY CAUSE IT TO MALFUNCTION AND
TAMPERING WITH THE GUN MAY MAKE IT LINGAFE


AWARNING: THE USE OF INCORRECT PROJECTILES MAY NOT BE SAFE. DO NOT REUSE AMMUNITION FOR ANY REASON.

WARNING: CO2 CARTRIDGES MAY EXPLODE AT TEMPERATURES ABOVE 120°F (48.9°C). DO NOT MUTILATE OR INCINERATE THEM. DO NOT EXPOSE THEM TO HEAT OR STORE CO2 CARTRIDGES AT TEMPERATURES ABOVE 120°F (48.9°C).

WARNING: ALWAYS USE 12GR CO2 CARTRIDGES.

A WARNING: KEEP HANDS AND FACE AWAY FROM ESCAPING CO2 GAS. IT CAN CAUSE FROSTBITE IF ALLOWED TO COME IN CONTACT WITH SKIN. ALWAYS MAKE SURE THE CO2 CARTRIDGE IS EMPTY BEFORE ATTEMPTING TO REMOVE IT FROM THE AIRGUN BY SLOWLY TURNING THE KNOB COUNTERCLOCKWISE ALL THE WAY UNTIL YOU NO LONGER HEAR THE ESCAPE OF CO2 GAS.

Description

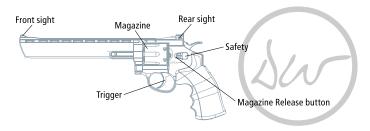

Safety functions





Turn off safety device: Safety is at mid position; and the safety is at "F" (Fire) position.

Turn on safety device: Push safety back; and the safety is at "S" (Safe) position.

3

Insert CO₂ Cartridge



Unmount the CO₂ handle cover.



Load the CO₂ capsule into the gun.



Turn the lock system clockwise to activate the CO₂ capsule.

Load BBs (1/2)



Push the CO₂ handle cover back in place.



Use right thumb pushing safety to "Open" then use left hand to dial cylinder.



Place the bullets in the Speed-loader.

Load BBs (2/2)



Push down the Speedloader and turn right to lock the bullets.

 


One-by-one load the steel BBs in the bullets.



Aim loader and insert the cylinder till a "click" is heard. Then push cylinder to position.

Adjust Rear Sight

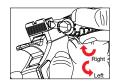

Make horizontal (right/left) adjustment*.



Make vertical (up/down) adjustment*.



Note: The best-aimed condition is that the rear sight, front sight and target are aligned in a straight line.

^{*} Tool not included. Standard screwdriver/tool can be used.

 
Mount tactical rail (1/2)



Counterclockwise (CCW) turn to unfasten screws*.



Use tool* to pin out spindle from left side of the gun and take out the aiming hole.

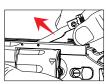

Take out both rear sight and spring.

* Tool not included. Standard screwdriver/tool can be used.

Mount tactical rail (2/2)



Put in tactical rail. Use tool* to fasten screws and fix tactical rail.



Put rear sight and spring back and insert the spindle.



Fasten the screw in clockwise (CW) direction*.

^{*} Tool not included. Standard screwdriver/tool can be used.

Technical information

Dan Wesson 8"

Length	Weight	Caliber	Magazine/Capacity	Material	Energy	Velocity
13.3 in/338 mm	2.29 lb/1040 g	.177/4.5 mm	6 rds	Metal/ABS	3.0 Joule	130 ms/426 fps



Made in Taiwan under licence by ActionSportGames® A/S, Denmark and Dan Wesson Firearms, USA.

Dan Wesson Firearms, USA and the logo are registered trademarks of Dan Wesson Firearms, USA and are used under worldwide exclusive license for replica firearms by ActionSportGames® A/S, Denmark.





©2011 AFTERMATH®

Gamo Outdoor USA, Inc. A Division of

aftermathairsoft.com