
# VIDEO RECORDER EYEWEAR

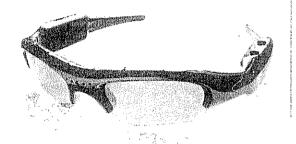

# USERWARIUAN









## **FEATURES**

- 1.Quality Polarized Lens from brand makers.
- Max 3 mega pixels pinhole CMOS carnera for clear digital video recording.
- 3.Built in Max8GB memory for approx 3hours video recording.
- 4. Memory slot can support max 8GB TF/Micro SD card.
- 5. Easy connection with PC/Laptops, no driver needed.
- 6. Sieek and elegant design meets your taste for life.
- 7. User friendly operation button for easy control.
- 8.Real recording time display, never let memorable meoments sneak away from life.
- 9.A must equipment highly recommended for journalists, traffic police, travellers, students and etc.

### STORAGE

- A) The device has Max 8GB in-built, User can choose to have 8GB TF card for bigger storage at his or her discretion.
- B) The memory card slot can support max 8GB TF card.
- C) When space is full, LED light will stop blinking and start data saving.
- D) You are kindly requested to insert and pull out the Micro SD card in power off mode to avoid data loss or damages to the device or Micro SD card.
- E) Please format Micro SD card before using

### **BATTERY**

- A) If failed to start the device, in most cases the battery is flat and needs to be recharged. For initial 3 charges, you are kindly requested to charge the li-polymer battery for at least 8-12 hours long to ensure its performance in future. Please do not charge it for over 12 hours.
- B) You can either charge the battery using USB cable or charge it through AC adaptor provided. Usually a full charge requests 3-4 hours.
- C)The LED lights will turn red when starts fecharging and will turn green when battery is fully charged.
- D)Please do not use other AC adaptors other than the one provided the standard kit to avoid damages to the product.
- E) If you haven't used the device for a long period of time, we suggest you to recharge the battery first before it.
- F) Better charge the battery in power-off mode for fast recharge and best product protection.

## PC/LAPTOP CONNECTION

#### A) System Requirement

- 1. CPU must be at least 1.6Ghz above
- 2. Operating system: Win 98/Me/2000/XP/Vista
- 3. USB slot
- 4. CD-Rom/DVD Rom
- 5. Minimum 1GB free hard disk space
- 6. Minimum 512MB memory
- Lower configuration PC with Integrated Graphic may sometimes encountering slack video play, suggest to use a PC with discrete Graphics.

#### B) Connecting PC or Lapton

- Plug the USB to the device and then connect to PC or Laptop thru USB port.
- The computer will recognize the newly added disk and shall install if necessary the driver.
- After installation, a new window will popup, and you are able to see a folder namely "Video" with the video files you have just recorded ready for downloading to local disk.
- 4. You can then copy or cut and save to your local hard drive.
- 5. When finished, click to remove the storage disk.

### **OPERATION**

#### A) Set time

- Connect with PC or Laptop ,then you can find a new added "Disk(X)" symbol in "my computer", "X" means disk name, like"DISK H" etc
- 2.Move the mouse to "Disk X" symbol double click "Disk X", right click build a new Text document under the root directory of "Disk X". Make sure the Text document is built under "Disk X" not under "video folder"
- 3. Rename the new Text document to "setdate.txt".
- 4.Open the new Text document,input the local true time according to the following set form.For example: The present Beijing time is: 09:09:01,9th,Sep,2009,So we input like this:20090909090901
- 5.Save the set time in the text document, after that, take a new recording. Connect with PC or Laptop, check the time is correct or not. If not blease set time again.

#### B) Switch On

To start the device, short press the On/Off button for only 1 second, you will see both the green and blue LED indicators are on. Then it will go into initialization procedures for 7-8 seconds. When blue LED indicator goes off, only Green LED light on, device is in standby status.

#### C) Switch Off

In standby status one long press the On/Off button for 3seconds will switch off the device.

#### D) Auto shut-off

If you leave the device without operation for 30 seconds in standby status it will automatically shut off for power saving. You need to restart it again if you want to do new recording.

#### E) Recording

#### 1.Start to record

In standby status, one short press of recording button, it will start recording. Blue LED light starts blinking to show that device is working properly. This can also be noticed by your peripheral vision.

## Caution: DO NOT record towards the sun or it will damage the camera.

#### 2.Stop and Save

During recording, one short press recording button, the device will stop recording and start saving data to the memory. Blue LED will light on and get off very quickly within half second. When blue light goes off, data saving finished and device is in standby status and ready for next recording.

## **SPECIFICATION**

Product Size	170*160*40mm (folded)	
Physical weight	39g	
Speed	Read > 700kbs, write > 500kbs	
USB	2. 0 (HS)	
Power supply	Embedded 550mAh Li-polymer Battery	
Power duration	2.5~3 hours	
Power Adaptor	5V DC/ 500mAh	
Power Ratio	<0.8W	
Memory	Buit In Max 8GB, Support max 8GB Micro SD card.	
Resolution	Max 736*480	
Video Format	AVI	
Audio	Stereo	
Lens specs	Max 3 mega pixels pinhole CMOS camera	
Recording Speed	30fps	
Working temp	-5℃-40℃	
Storage temp	-20℃-80℃	
Player	Windows Media Player, Quicktime,	
	Real player, Storm codec	
Menu Language	English	
Operating System:	Win98,WinMe, WinXP, Win2000,	
	Windows Vista	

## **TROUBLE SHOOTINGS**

Possible reason	Solution
Flat battery	Recharge battery
device jam	Reset, then start again
Flat battery	Recharge battery
Connect to PC when power off	Connect to PC when device on
USB Cable failure	Replace new cable
PC Bios disabled	Set USB enabled
Main board does not support USB port	Update mainboard driver
PC system Jam	Reboot PC
Memory is full	Delete unwanted files
Battery power shortage	Recharge
Memory is full	Delete unwanted files
	Flat battery device jam Flat battery Connect to PC when power off USB Cable failure PC Blos disabled Main board does not support USB port PC system Jam Memory is full Battery power shortage



Video Eyewear Recorder



User Instruction



Carry Case

Cleaning Cloth



AC adapter



USB cable

# PARTS INTRODUCTIN

Working LED Indicator
Recording Button
Power on/off
Reset
Micro SD Card Slot
Camera
Power LED Indicator

Thank you for choosing this item with following configuration:

Pixel: □1.3MP **☑**3MP. Solution: □ 640\*480 **☑** 736\*480

Built in: □2GB

**☑**4GB

□8GB