

## All-In-One Laser Boresighter Model – CPLBS1745


CenterPoint Hunting and Outdoors • 7629 Routes 5 & 20 • Bloomfield, NY 14469  
www.centerpointoptics.com • Made In China




READ ALL INSTRUCTIONS AND WARNINGS IN THIS MANUAL BEFORE USING THIS LASER. BUYER AND USER HAVE THE DUTY TO OBEY ALL LAWS ABOUT THE USE AND OWNERSHIP OF THIS LASER. **CAUTION: AVOID DIRECT EYE EXPOSURE.** Laser emitted from the aperture. **CAUTION:** A laser sight is not a toy. It must be used under the supervision of an adult. Improper use or careless use may cause serious injury, especially to the eyes. Avoid direct eye exposure to the laser beam.

Always follow the safety instructions found in the owner's manual and keep these instructions in safe place for future use.

**CAUTION:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

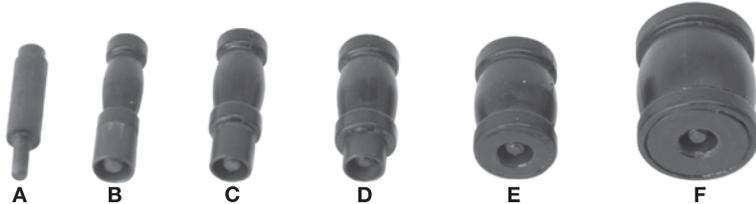

- A. .17 Cal.
- B. .22 cal, 6mm, .25 cal
- C. 6.7mm, .27 cal, 7mm, 7.62mm, .30 cal and .32 cal
- D. .32cal, 8.5mm, .338 cal, .35cal and .357cal
- E. .44, .45 and .50 cal
- F. 12, 16 and 20 gauge

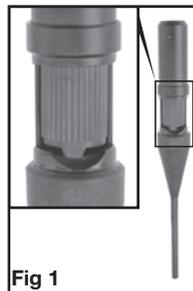

### Loading or Replacing Batteries

- The battery compartment also rotates to turn the laser on/off. In order to change the battery the laser must be in the "ON" position

**WARNING:** Point the laser sight in a safe direction at all times. Avoid direct eye exposure.

- Turn the laser to the "ON" position (fig 1)
- Lift up on the battery compartment and pull battery compartment out of boresighter.
- Insert batteries with positive (+) facing down in the battery compartment.
- Put battery compartment back into laser boresighter by pushing the compartment up and in.
- Turn the battery compartment to the off position until ready to use.

 
### Directions for Use

#### Step 1:

Make sure your firearm is unloaded, "ON SAFE" and pointed in a SAFE DIRECTION.


#### Step 2:

Choose the adapter size that most closely fits your barrel bore and thread adapter onto the boresighter. (fig 2)



#### Step 3:

 Insert the boresighter into the barrel. Turn the boresighter left until the boresighter fits snug inside the barrel. (fig 3)




#### Step 4:

Turn the battery compartment to the "ON" position.

**WARNING:** Point the laser sight in a safe direction at all times. Avoid direct eye exposure.

#### Step 5:

Sight In. Shine the laser onto a target 25 yards away. Adjust the scope or sight's windage and elevation dials until the laser dot matches up with the center of the crosshairs or sight. If sighting in at a shorter distance (i.e. at 10 yards) adjust the crosshairs approximately 2inches above the red laser dot. (fig 4)

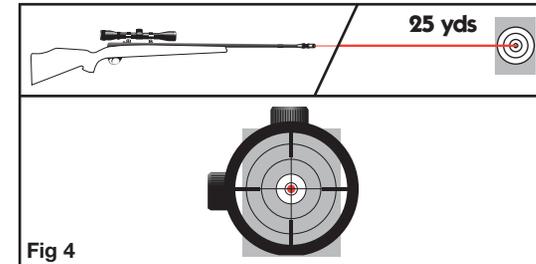

#### Step 6:

**CAUTION:** Remember to remove the boresighter after sighting in, and before firing. You are now ready to go to the firing range for final adjustments with ammunition.

### SPECIFICATIONS

<b>Output Power</b>	Class 3R, <5mW	<b>Barrel Requirement</b>	Minimum 3.8" barrel
<b>Wavelength</b>	650nm	<b>Batteries</b>	(3) LR44 Button Cell Batteries
<b>Visibility</b>	Rate 100yds at night; 30yds in daylight	<b>Warranty</b>	1 year

### LIMITED LIFETIME WARRANTY ON CENTERPOINT SCOPES

Your CenterPoint scope is warranted to be free of defects in materials and workmanship for the lifetime of the original owner. This warranty does not cover damages due to fair wear and tear, failure to provide routine maintenance, and does not include batteries or accessories. This warranty lasts as long as the original purchaser owns the product, and is not transferable. In the event of a defect under this warranty, we will, at our option, repair or replace the product provided our inspection indicates that an original defect exists. CenterPoint reserves the right to replace any product which is no longer available with a product of comparable value and function. If CenterPoint determines the repair is not covered under the warranty guidelines, there could be a charge to you for the repair. This is a limited warranty and does not cover damages caused by misuse, improper handling or installation or maintenance provided by someone other than a CenterPoint.

This limited warranty does not include consequential damages, incidental damages, or incidental expenses, including damage to property or any other expense. CenterPoint disclaims any implied warranties. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on implied warranties so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.

### WARRANTY CLAIMS/ REPAIR SERVICE

If your scope needs repair, call CenterPoint Customer Service at 1-800-726-1122 or visit our web site at www.centerpointoptics.com DO NOT ATTEMPT TO DISASSEMBLE IT! Any disassembly or modification not performed by CenterPoint Hunting and Outdoors will void the warranty.

**USA Customers:** Please contact CenterPoint before shipping your product. Include with product your name, address, description of problem, phone number and copies of sales receipt and warranty. A check or money order in the amount of \$10.00 to cover the cost of postage and handling is also required. Package and return to CenterPoint, Crosman Corporation, 7629 Rts. 5 & 20, Bloomfield, NY 14469. CenterPoint will not assume any responsibility for any loss or damage incurred in shipping.

**Canadian Customers:** Contact the Gravel Agency 418-682-3000 X46

**Other International Customers:** Please return product to your nearest distributor. If you do not know your distributor, please call 585-657-6161 and ask for our International Department for assistance. Shipping and handling costs may apply.