



MINI BORE SIGHT .17 TO .22 CALIBER

- Sight in your scope and iron sights
- Works with .17 through .22 caliber (min. 4" barrel)
- Batteries, hardware and all adapters included
- 5 milli-watts of laser power, class IIIa, 650nm
- Made from 6061 T6 Aluminum



U.S. Patent No. 6,421,947



REV0510



MINI BORE SIGHT .17 TO .22 CALIBER

- SCOPE ALIGNMENT
- RIFLES AND AR'S
- SAVES AMMO!



MBS-1722

www.LASERLYTE.com



.17 TO .22 CALIBER LASER BORE SIGHTER

MBS Sight-In Steps




 

MBS-1722

- ① **UNLOAD YOUR FIREARM!**
- ② Find adapter to fit your barrel, thread proper screw into adapter.
- ③ Adjust adapter to fit snug inside of barrel.
- ④ Roll the switch until it comes on.
- ⑤ Sighting-in: A. 25-30 Yards/Meters - **RECOMMENDED!**
 - I. Shine laser dot out 25-30 Yards/Meters.
 - II. Adjust cross hairs directly on top of the dot.

----- or -----


 - B. 10 Yards/Meters (If 25-30 Yards/Meters not available)
 - I. Shine laser dot out 10 Yards/Meters.
 - II. Using product card adjust cross hairs approximately 2 inches/5cm above the red dot.
- ⑥ **REMOVE BORE TOOL!** At firing range fire first 100 yard/meter shot. Make final adjustments.

① UNLOAD YOUR FIREARM!

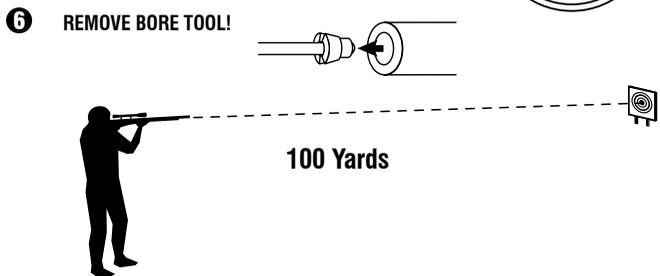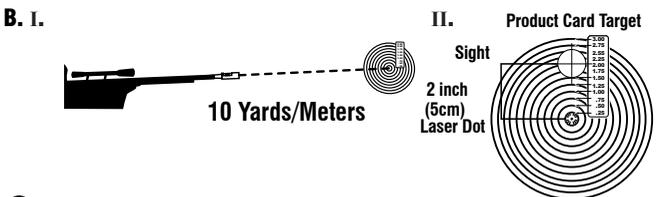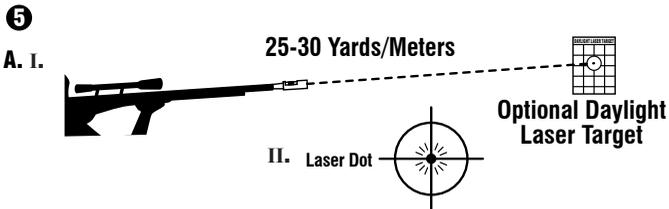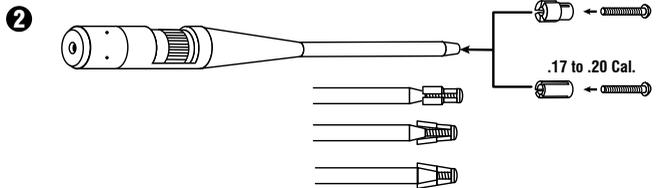

Battery Replacement: (3) 393 Batteries


- ① Turn the laser to the on position.
- ② Lift up on the plastic battery cup.
- ③ Pull out and replace batteries. Insert Batteries with positive (+) going into cup.
- ④ Put battery cup back into bore tool.

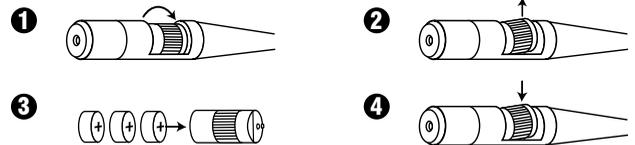


Scope / Gun Leveler Adapter

MBS-PAK
(Optional)

- ① Slide gun leveler onto top scope rail.
- ② Use the bubble level and adjust gun so bubble is between lines. Secure gun, mount scope and follow scope leveling directions.

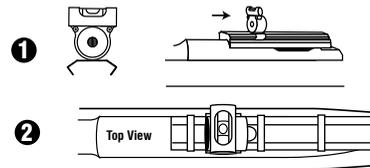

- ① **UNLOAD FIREARM!** Secure firearm in a rest and make level.
- ② Follow 1-3 Sight-In Steps.
- ③ Put the adapter with ring over the end of the bore tool.
- ④ Adjust bubble between the two lines.
- ⑤ Turn on laser and shine on wall 3 yards/meters away.
- ⑥ Adjust cross hairs until they are parallel with red laser line.
- ⑦ Tighten down scope rings, pull off scope leveler and proceed to Sight-In steps.

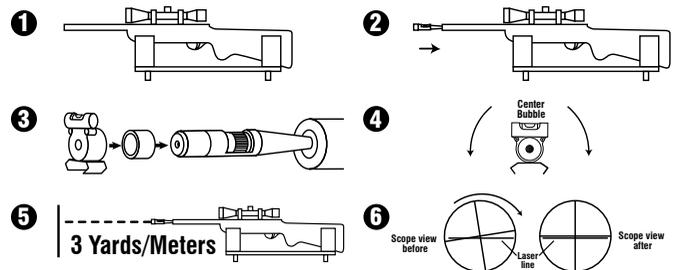

WARRANTY:
The Universal Laser
Bore Sighter is warranted
for one year from any
manufacturers defects
from date of purchase.



LASERLYTE
A Division of P&L Industries
101 Airpark Road - Cottonwood, AZ 86326
Phone 928-649-3201 - Fax 928-649-3970
www.LaserLyte.com